

UT12C

AC Voltage Detectors

Operating Manual

⚠ Warning:

Thank you for purchasing the UT12C probe and for the full use of the product, please:
 -----Read the user manual carefully.
 -----strictly observe the safety rules and notes listed in the manual

Please note the following items to guard against electric shocking or personal injury:

If any damage about the detector or failure to operate, please do not use it. If any doubt, please deliver the probe for repair.

Please do not impose voltage exceeding the rating voltage on probe.

There may be a danger of electric shocking for voltage higher than 30V (AC), please pay attention to that in operation and observe local and national safety code of the country you are in.

I. Electric symbol

☐	Double insulation
⚡	Be careful! Electric shocking
⚠	Dangerous! Important information, reference manual

CAT IV equipment is intended for protecting from transient voltage injury resulted by first level power source such as meter or overhead wires or ground wires infrastructure.

The product meets:

EMC: EN55022:2006+A1:2007
EN61326-1:2006

LVD: EN61010-1:2010
EN61010-031:2002+A1:2008

UL: UL61010-1, 2nd Edition, 2005-07-22

CAN/CSA-C22.2 No.61010-1,2nd Edition,2004-07

⚠ Notes:

no contact with the white part of front end of detector body for your finger!

II. Working voltage and working condition

Working voltage: 90V-1000V AC

Working condition:

- 1) Working Temperature: 0°C~40°C
Storage Temperature: -10°C~50°C
Humidity: ≤95%
- 2) Altitude: ≤2000m

III. Operation instructions

Activate probe	Press once gently the button labeled with power symbol, buzzer, LED and motor will work concurrently for 0.5 second, indicating detector is activated successfully. While entering the test standby status, LED will flicker two times continuously with the interval of 1.5 seconds.
AC voltage test	1) Under non-vibration mode, put tip of detector close to the object being tested with AC voltage, LED will flick and buzz. 2) Under vibration mode, put tip of detector close to the object being tested with AC voltage, LED will flick and buzz and motor vibrate.
Power off automatically	Battery will power off automatically for energy saving if do not use detector about 3 minutes. Buzzer and LED will work concurrently 1 second, indicating power off successfully.
Stop using motor	Press button gently after power on, LED flickers, buzzer works, but motor fails to vibrate, a mode called non-vibration (shifting between vibration and non-vibration mode with button after power on).
Stop using probe	Press button about 2 second to power off the detector with 1 second of buzzer and LED alight 1 second.


IV. Indication for low electricity of battery

Indication for low electricity of battery When battery voltage is lower than 1.75V, LED will flicker 5 times slowly after power on, and buzzer, if any signal, may sound faintly, and motor vibrates weakly. Please replace battery immediately for the test accuracy.


V. Battery replacement

Battery: 2×1.5V AAA

(1). with one hand holding detector body, and thumb of other hand pressing the control position of detector head and extending it backward.

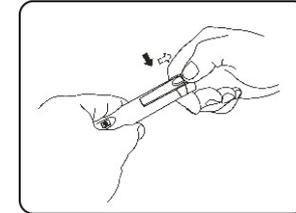

(2). Please take out the upper cover of detector according to the direction as shown in the picture, replace the battery. (See the following picture)

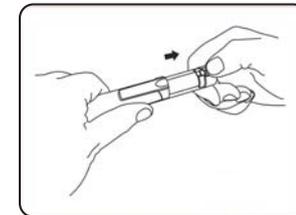

Cleaning

Periodically wipe the case with a dry cloth do not use abrasives or solvents.

END

This operating manual is subject to change without notice.

Manufacturer:

Uni-Trend Technology (China) Limited
No 6, Gong Ye Bei 1st Road
Songshan Lake National High-Tech Industrial
Development Zone, Dongguan City
Guangdong Province
China
Postal Code:523 808

Headquarters:

Uni-Trend Group Limited
Rm901, 9/F, Nanyang Plaza
57 Hung To Road
Kwun Tong
Kowloon, Hong Kong
Tel: (852) 2950 9168
Fax: (852) 2950 9303
Email: info@uni-trend.com
http://www.uni-trend.com